


CONVERSION GRAPH / GRÁFICO DE CONVERSION. A table for converting between meters and feet.

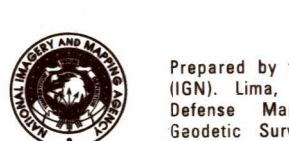

Prepared by the Instituto Geográfico Nacional (IGN), Lima, Peru, in collaboration with the Servicio Geodésico Interamericano de la Defensa Mapping Agency Inter American Geodetic Survey. Printed (Published) by the Instituto Geográfico Nacional, Lima, Peru.



POPULATED AREAS CLASSIFIED BY POLITICAL STATUS. AREAS POBLADAS CLASIFICADAS POR DIVISION POLITICA. IN BUILT-UP AREAS ONLY THROUGH ROUTES ARE CLASSIFIED. EN AREAS DESARROLLADAS SOLAMENTE SE CLASIFICAN LAS RUTAS TROPICANALES.

LEGEND / LEGENDA

 
Legend table with symbols and descriptions for roads, railroads, populated places, boundaries, and drainage.

NOTES / NOTAS

CAUTION! NOT ALL TELEPHONE AND ELECTRIC SERVICE LINES ARE SHOWN. ADVERTENCIA: NO TODAS LAS LINEAS TELEFONICAS Y ELECTRICAS SON MOSTRADAS.

GLOSSARY / GLOSARIO

Glossary table with terms and their corresponding symbols or abbreviations.



ELEVATIONS IN METERS / ELEVACIONES EN METROS. CONTOUR INTERVAL 50 METERS / INTERVALO DE CURVAS 50 METROS.

ELLIPSOID: INTERNACIONAL. GRID: 1,000 METER UTM, ZONE 18. PROJECTION: TRANSVERSE MERCATOR. DATUM VERTICAL: MEAN SEA LEVEL. HORIZONTAL DATUM: PROVISIONAL SOUTH AMERICAN DATUM 1956.

Technical diagrams and text explaining the 100 METER REFERENCE and SAMPLE 1,000 METER GRID SQUARE.

LIMITED DISTRIBUTION. Distributor authorized to DOD, IAW DODIG 5010-10-4-55. Refer other requests to Headquarters, DMA, ATTN: Liaison Office, Stop P-25, Dayton, OH 45433-0001.

BOUNDARIES / LIMITES. ADJOINING SHEETS / HOJAS ADYACENTES.

ELEVATION GUIDE / GUIA DE ELEVACION. A vertical scale showing elevation in meters and feet.